



## DIRECTIONS


### End Caps

#### Prepare the ends of the Slimline track –

Use a small file to remove rough edges and to ensure track ends are square.



#### FIT THE END CAP TO A SINGLE LENGTH OF TRACK

Push the End Cap into the end of the Slimline track (see Figure 1) with the curved section of the End Cap at the bottom.

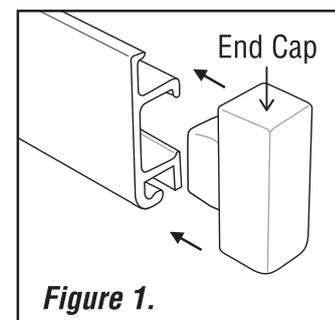

#### FIT THE END CAP TO AN OUTSIDE CORNER

After preparing the ends of the Slimline track (as described above), install the track so the ends are flush with the outside corner of the wall (see Figure 2). If installing a number of lengths of track in a row, install the lengths adjacent to the outside corner first. Once the tracks are installed, insert one Slimline End Cap into the end of one of the tracks with the curved section of the End Cap at the bottom. One End Cap is designed to cover both ends of the tracks that meet on an outside corner (see figure 3).

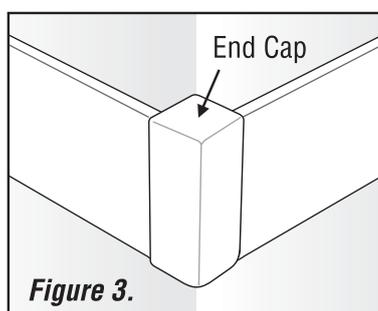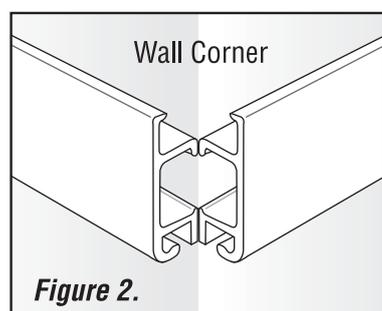

**NOTE:** INSIDE CORNERS do not expose the track ends, so End Caps are not required.

### The Slimline System Weight Guide To Hangers & Hooks

**NOTE:** Maximum weights below can be doubled when using two hangers and hooks per picture.

	Slimline Mini Hooks	Slimline Push Button Hooks	Clearline Push Button Hooks (black)	The Gallery System Push Button Security Hooks
Slimline Clear Tape Hangers	✓ Max 7kg			
Slimline Clearline Hangers	✓ Max 8kg		✓ Max 6kg	
Slimline Stainless Steel Cable Hangers	✓ Max 15kg	✓ Max 14kg	✓ Max 6kg	✓ Max 15kg

**IMPORTANT:** Use two hangers and hooks for all pictures weighing over recommended maximum weight. During the hanging process using two hangers and hooks, ensure weight of the picture is evenly distributed on both hooks at ALL times. This will prevent overloading one hook which may result in damage to the hook or hanger.