


Traditional Picture Rail Hanging System



DIRECTIONS

Picture Rail Hook

1. Feed the stainless steel cable into the hole in the Picture Rail Hook.
2. Hang the Picture Rail Hook (with cable) onto your traditional picture rails.
3. Fit the adjustable hook (either the Allen Key Hook or the Push-Button Hook) as per The Gallery System hook directions.

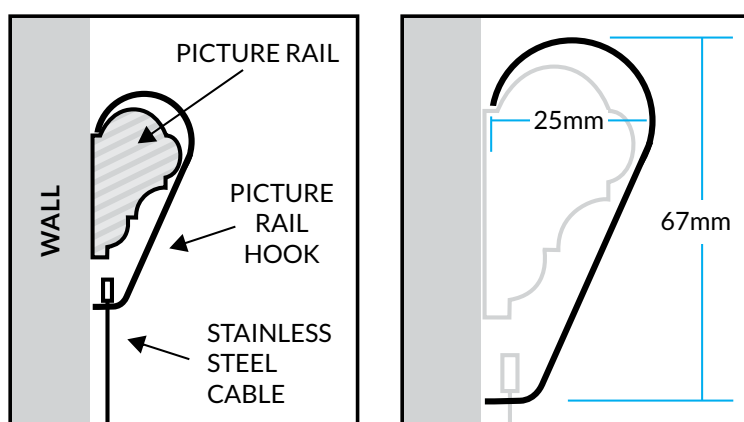

RECOMMENDED WEIGHT:

See The Traditional Picture Rail System Weight Guide below for maximum weight specifications and compatibility of hangers and hooks.

Weight Guide for Traditional Picture Rail Hangers & Hooks

NOTE: Maximum weights below can be doubled when using two hangers and hooks per picture.

	The Gallery System Allen Key Hooks	The Gallery System Push Button Hooks	The Gallery System Security Hooks
Brass or Stainless Picture Rail Hooks with Stainless Steel Cable Hangers	Max 20kg #	Max 20kg #	Max 20kg #

Maximum weight as long as the picture rails are fastened securely to the walls.

IMPORTANT: Use two hangers and hooks for all pictures weighing over recommended maximum weight. During the hanging process using two hangers and hooks, ensure weight of the picture is evenly distributed on both hooks at ALL times. This will prevent overloading one hook which may result in damage to the hook or hanger.